



## Manual Transmission-Controls, Assembly **34**

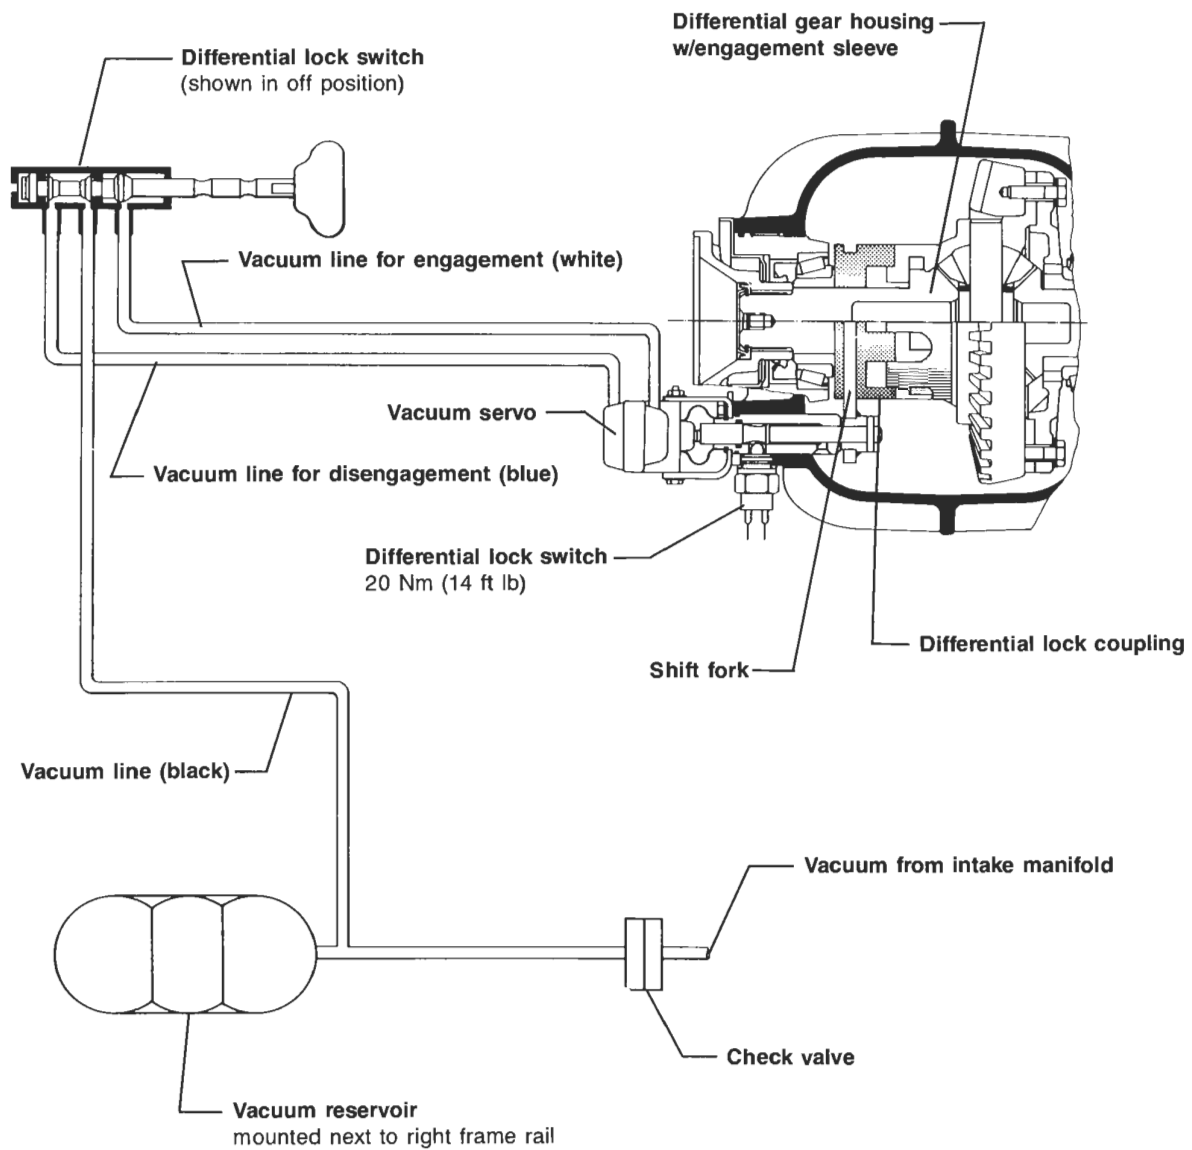

34-1658


## 34 Manual Transmission – Controls, Assembly

### Differential lock servo, removing

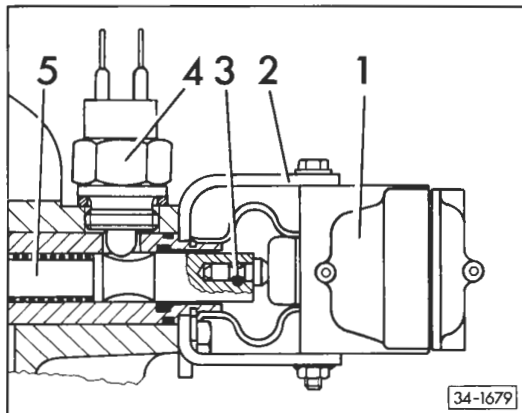

- 1 servo
- 2 bracket
- 3 spring pin
- 4 switch for lock indicator light
- 5 operating rod

### Work sequence

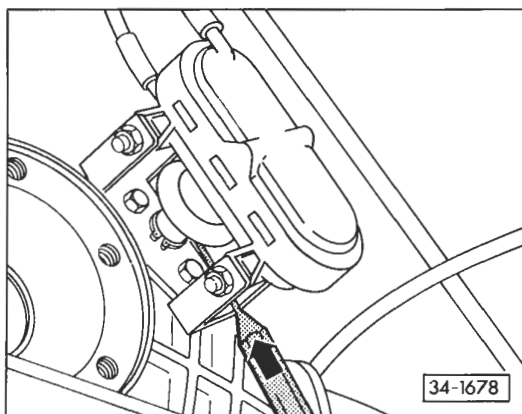


- push protective casing back and drive out pin (arrow)
- remove vacuum lines
- remove bolts attaching servo to bracket


### Note

Only white vacuum hoses are supplied as spare parts (Part No. N 20 139.1). When replacing hose, cut to proper length and mark with tape of appropriate color.


## Differential lock control, repairing Switch, removing/installing

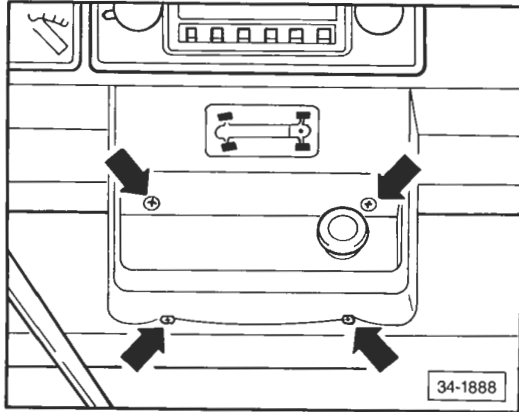


- unscrew knob, if necessary hold switch piston with needle nose pliers
- remove trim plate (**arrows**)

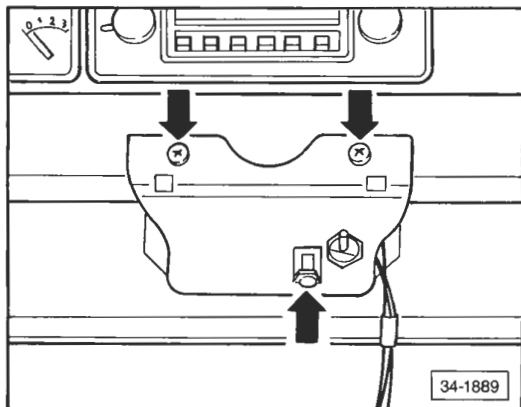


- remove bracket

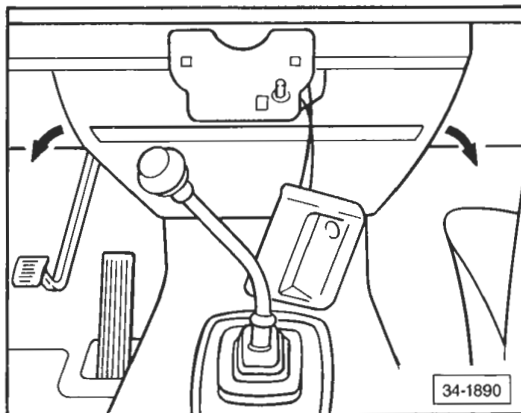

- remove trim

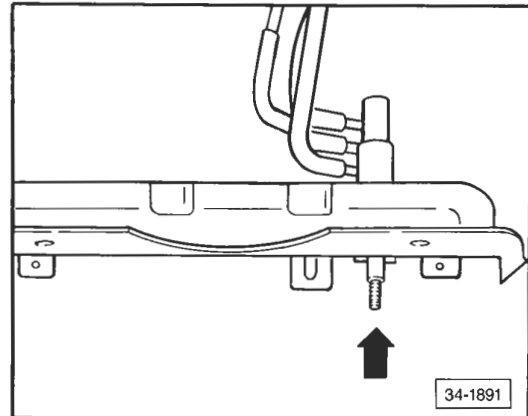

- press switch out of guide bushing

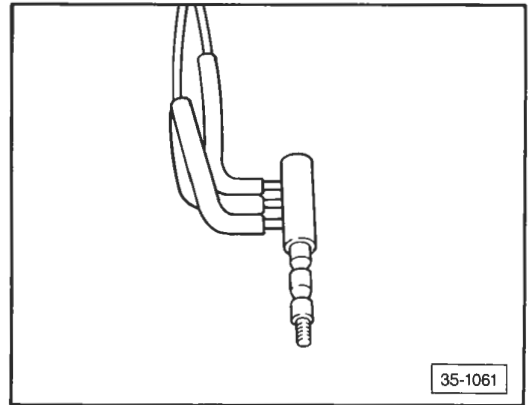

- detach vacuum hose
- note hose locations